



Hardware Quick Reference

LANCOM CS-8132F

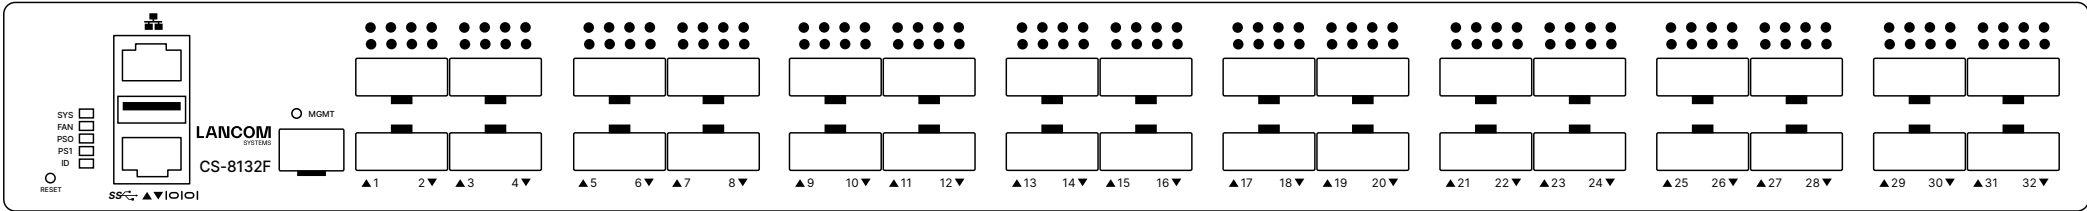

- 1 **OOB management interface**
Use an Ethernet cable to use this out-of-band service port for an IP interface independent of the switching plane for management tasks or connection to a monitoring server. In particular, this port can be used as a VPC-keepalive link (split-brain detection).
- 2 **USB interface**
Connect a USB stick to the USB interface to store general configuration scripts or debug data. You can also use this interface to upload a new firmware.
- 3 **Serial configuration interface (Console)**
Connect the configuration interface to the USB interface of the device you want to use for configuring / monitoring the switch using the serial configuration cable supplied.
- 4 **Management interface**
10G SFP+ in-band management interface (for future use)
- 5 **QSFP28 interfaces 40G / 100G**
Insert suitable LANCOM transceiver modules into the QSFP28 interfaces 1 to 32. Choose cables which are compatible with the transceiver modules and connect them as described in the transceiver modules mounting instructions: lancom-systems.com/transceiver-modules-mi.
- 6 **Grounding connector (rear panel)**
Use the enclosed grounding bracket with screw to secure the switch against ground.
- 7 **3 slots for fan modules (rear panel)**
To remove a fan module in case of defect, loosen the knurled screw of the module and remove the module from the plug-in unit. To install a new fan module, push it into the corresponding slot. Fasten the module to the switch housing with the knurled screw. Please note that a defective fan should be replaced within 48h.
- 8 **2 slots for power supply modules (rear panel)**
Supply the device with power via the power supply sockets of the power supply modules. Use the supplied power cords or a country-specific LANCOM Power Cord.
- To remove the power supply module, disconnect the module from the power supply and then pull the plug out of the module. While pressing the release lever 9 to the left, you can pull the module out of the device by the handle 10.

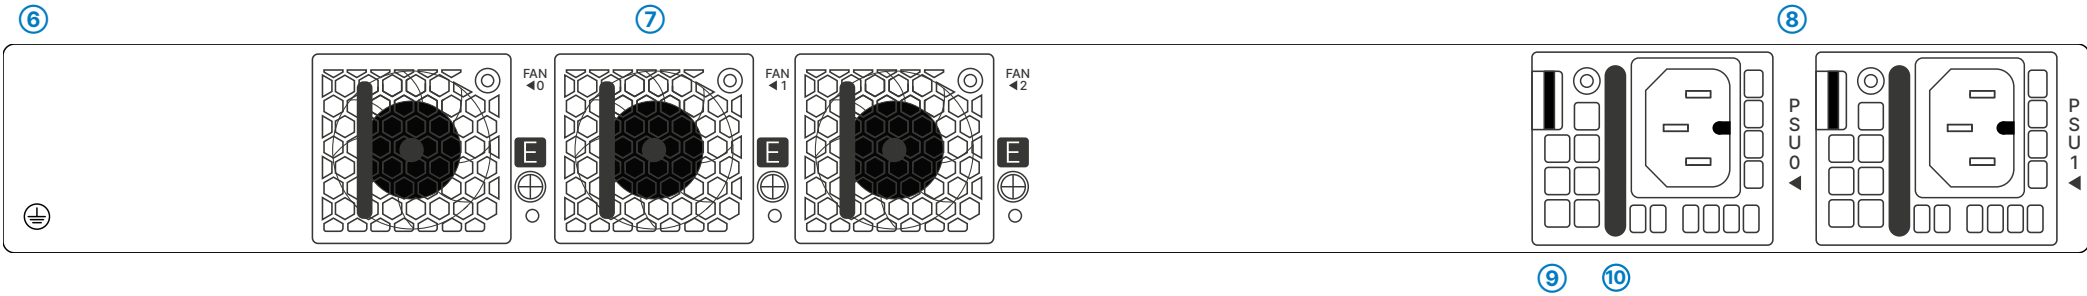

Before initial startup, please make sure to take notice of the information regarding the intended use in the enclosed installation guide!

Operate the device only with a professionally installed power supply at a nearby power socket that is freely accessible at all times.

All power plugs of the device must be freely accessible.


Please note that support for third-party accessories is not provided.




Please observe the following when setting up the device

- Do not rest any objects on top of the device and do not stack multiple devices.
- Keep all ventilation slots clear of obstruction.
- Mount the device into a 19" unit in a server cabinet using the provided screws and mounting brackets. Both slide-in rails are attached as shown in the accompanying installation instructions www.lancom-systems.com/slide-in-MI.

Mounting & connecting

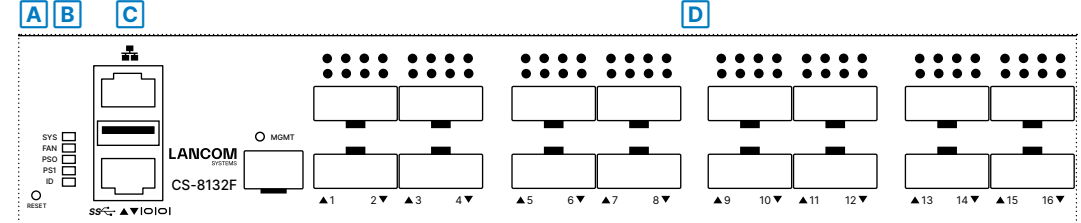

A RESET button	E Power supply unit (rear panel)
Short press: Switching the port LED display	Off: No input power to all power supplies.
3 - 10 seconds pressed: Device restart	Green: Output ON and OK
Longer than 10 seconds pressed: Configuration reset and device restart	Green, blinking (1/sec): PSU standby state input power present / Only +5VSB on.
B SYS / FAN / PS0 / PS1 / ID	Green, blinking (2/sec): Power supply firmware updating (boot-loader mode).
SYS: off: No power	Red: Power supply critical event causing a shutdown, failure, over current, short circuit, over voltage, fan failure, and/or over temperature.
SYS: green, blinking: Host CPU/BMC boot in progress	Red/green, blinking: Power supply warning events where the power supply continues to operate; high temperature, high power, high current, and/or slow fan.
SYS: green: Host CPU/BMC boot complete	
FAN: off: Fans not initialized	F Fan module (rear panel)
FAN: green: All fans working normally	Off: No input power
FAN: orange, blinking: Fan failure: maintenance required	Green: Fan function OK
PS0 / PS1: off: No power	Orange, blinking: Fan function abnormal, service required
PS0 / PS1: green: PSU working normally	
PS0 / PS1: orange, blinking: PSU failure: maintenance required	
ID: For future use	
C OOB management port LEDs	
Left LED	
Off: No power	
Green: Link available, no data traffic	
Green, blinking: Data transmission 1 Gbps	
Right LED	
Off: No power	
Orange: Link available, no data traffic	
Orange, blinking: Data transmission 10 / 100 Mbps	
D QSFP28 ports 40G / 100G (4 LEDs per port)	
Off: Port inactive or disabled	
All 4 LEDs green: Link 100 Gbps	
All 4 LEDs green, blinking: Data transfer, link 100 Gbps	
All 4 LEDs orange: Link 40 Gbps	
All 4 LEDs orange, blinking: Data transfer, link 40 Gbps	

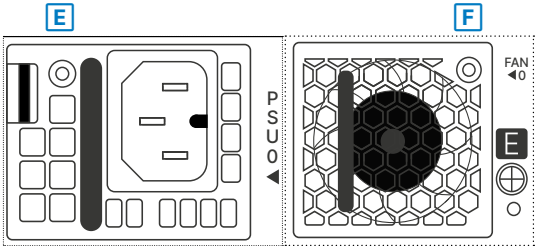

Hardware	
Power supply	Exchangeable power supply modules (110-230 V, 50-60 Hz)
Environment	Temperature range 0-45° C; humidity 10-90 %, non-condensing
Housing	Robust metal housing, 1 HU with removable mounting brackets and slide-in rails, network connections at front and rear, dimensions 440 × 43.8 × 480 mm (W x H x D)
Number of fans	3
Interfaces	
QSFP28	32 QSFP28 40 / 100 Gbps ports
OOB	1 RJ-45
USB	1 USB host
Console	1 RJ-45
Package content	
Mounting brackets	2 19" mounting brackets, 2 slide-in rails for rear stabilization in 19" racks
Power supply	2 exchangeable power supply modules LANCOM SPSU-750 (hot swappable, for redundancy operation)
Fan modules	3 fan modules LANCOM SFAN-CS8, already mounted
Cables	2 power cords, 1 serial configuration cable
Grounding material	1 grounding bracket incl. screw

Hereby, LANCOM Systems GmbH | Adenauerstrasse 20/B2 | D-52146 Wuerselen, declares that this device is in compliance with Directives 2014/30/EU, 2014/35/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006. The full text of the EU Declaration of Conformity is available at the following Internet address: www.lancom-systems.com/doc